

You will need a steel measuring tape, <u>Kitchen Measuring Checklist</u>, and a pencil. The Kitchen Measuring Checklist has the steps you need so you will not forget!







- MAKE A ROUGH DRAWING OF THE ROOM.
- MEASURE CEILING HEIGHT.
 - To get an accurate measurement, you should measure the height at 2-3 different locations in the room. If the room has soffits, make sure to note and measure them as well.






MEASURE OVERALL LENGTH OF EACH WALL. Wall 2 KITCHEN MEASURING **CHECKLIST** -48"-WALLS: Window including Trim MAKE A ROUGH DRAWING OF THE ROOM. Plumbing MEASURE CEILING HEIGHT. MEASURE OVERALL LENGTH OF EACH WALL. Wall 3 MEASURE EACH WALL SECTION (NOT CABINETS). Wall 1 DOORS & WINDOWS: MEASURE DOOR/WINDOW (INCLUDING TRIM). Ceiling Height 96' MEASURE WINDOW DISTANCE OFF FLOOR MARK EXACT LOCATION OF WINDOW/DOOR(S) MARK CENTERLINE FOR PLUMBING & APPLIANCES. Refrigerator SALES READINESS - FROM TIME OF PURCHASE: -120" 10 DAYS 3-4 WEEKS 4+ WEEKS Wall 4 ALL INFORMATION IS REQUIRED IN INCHES TO COMPLETE ANY LAYOUT. ADDRESS: 123 Main St 129.5" City & State PHONE: 123-456-7890 REP NAME: JOHN SMITH XX-XX-XXXX CABINETLINE: Pro White CEILING: 96" " HIGH 105.5" YES NO SOFFIT: * IF YES: ________ " HIGH * BEING REMOVED? YES YO WALL CABINETS (HEIGHT): 36" 30" Open STACKED TO HEIGHT NA " to CH - 96" CROWN: YES Soffit - 6"H x 24"D 89.5" Dining 137.5" * EXTEND TO CEILING? YES NO SINK: SINGLE DOUBLE FARM SINK CENTER: _____" * OFF WHICH WALL: LEFT RIGHT DISHWASHER: YES NO " WIDE RANGE: 72" 57" ☐ STANDARD □ сооктор 48" HOOD: ☐ UNDER CAB ☐ MICROWAVE ☐ DECO-METAL ☐ DECO-WOOD 15" FRIDGE: ______"W X ______"H _____ " HIGH VANITY: HARDWARE:

_____ LIGHTING:

_____ COUNTERTOP: _____ 129.5" NOTES/EXTRAS: (PANTRY, TRASH PULLOUT...)



- MEASURE EACH WALL SECTION (NOT CABINETS).
 - Add the measurements to the corresponding wall on the floor plan sketch.

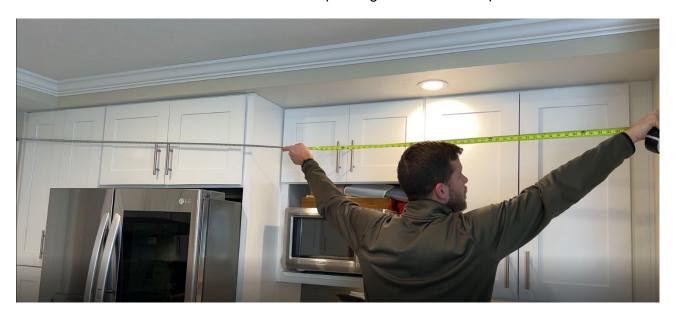

- MEASURE DOOR/WINDOW (INCLUDING TRIM).
 - Note the measurements on the Kitchen Measuring Checklist floor plan sketch.






MEASURE WINDOW DISTANCE OFF FLOOR.

MARK EXACT LOCATION OF WINDOW/DOOR(S).

- When measuring windows, record the wall length on either side of the window. Then measure the height and width of the window, including casing.
- MARK CENTERLINE FOR PLUMBING & APPLIANCES.
 - You'll need the width, height, and depth for all the appliances, and if you can include the brand and model of each, even better.

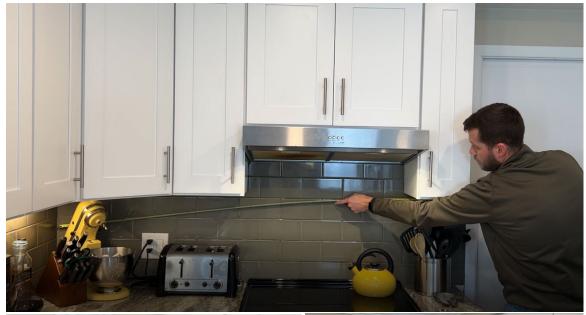





If keeping existing appliance location measure and note the locations of electric, gas, or plumbing outlets.


Any obstructions such as vents, radiators, or floor registers should also be added to the floor plan.

Measure from the wall to the center of the sink. Record that measurement, the sink size, and the type of sink (single or double bowl) on the floor plan.





If your layout includes an over-the-range microwave, make sure you mark where the outlet you will use is located on the wall.

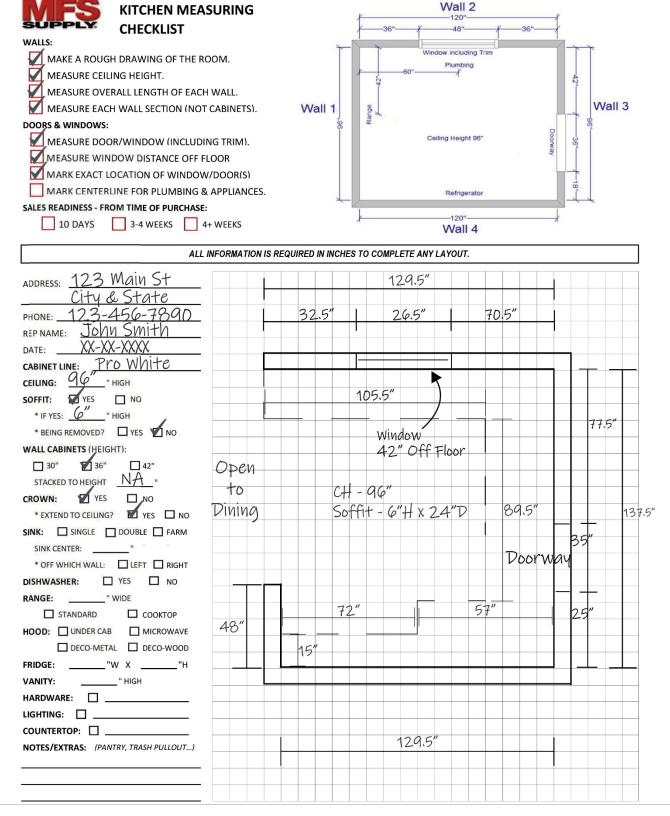



Mark any additional information you think would be useful and take some pictures of the space to help the designers visualize the layout.











In the end you should have something that looks similar to the below example.

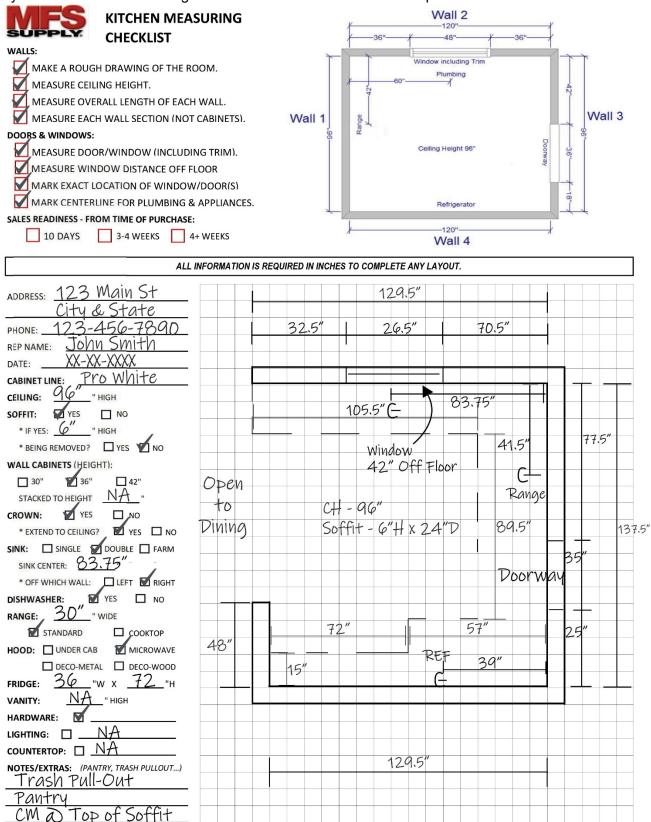





Once you've completed and submitted the Kitchen Measuring Checklist to our designers, you'll receive 2-D and 3-D renderings of your kitchen, just like the below example.

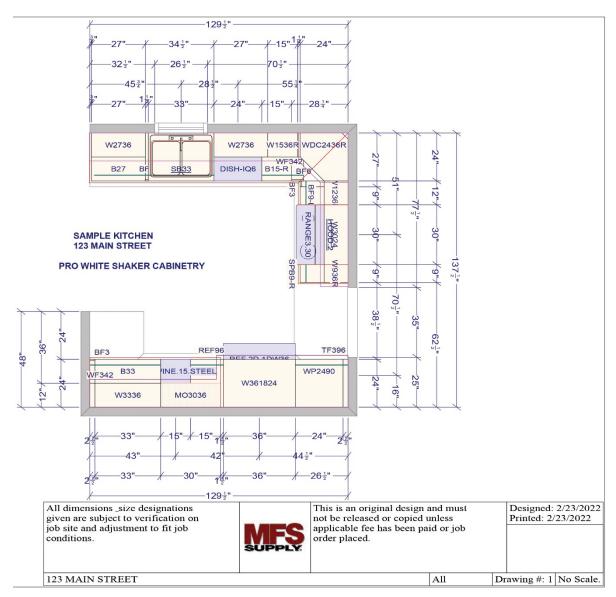



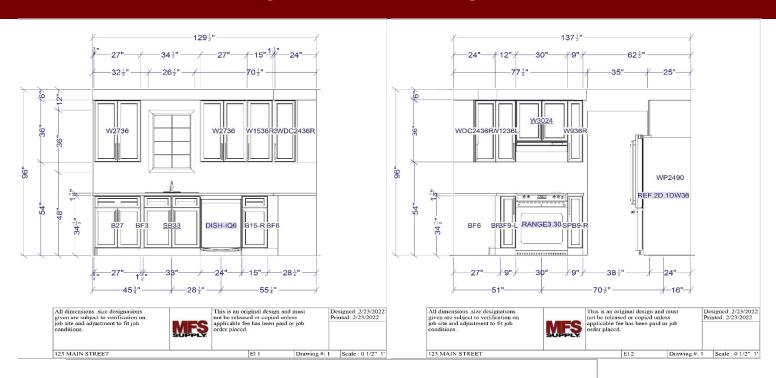

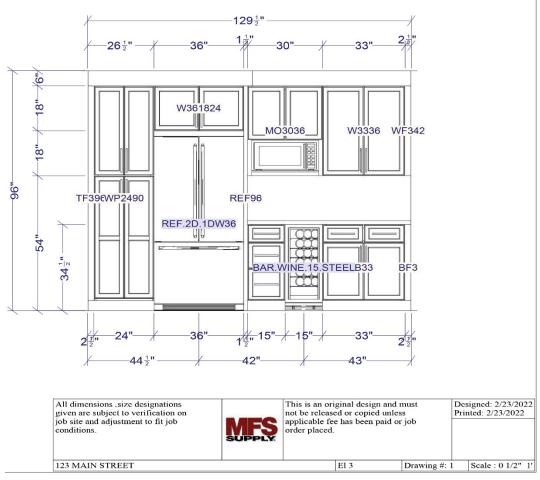



3-D Rendering



Note: This drawing is an artistic interpretation of the general appearance of the design. It is not meant to be an exact rendition.

MFS SUPPLY Designed: 2/23/2022 Printed: 2/23/2022

123 MAIN STREET

All

Drawing #: 1